 
 
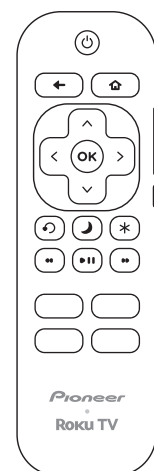 
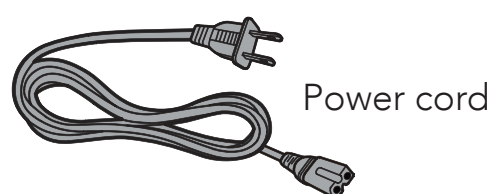 
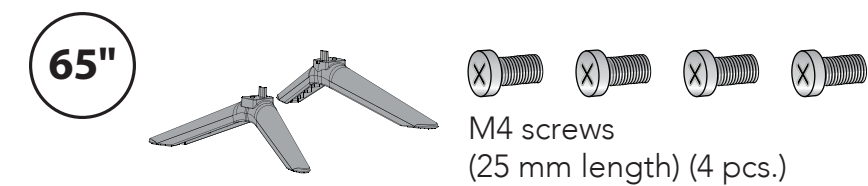 


PN43-R851-26U / PN43-R851-26C  
PN55-R851-26U / PN55-R851-26C  
PN65-R851-26U

## INCLUDED ACCESSORIES

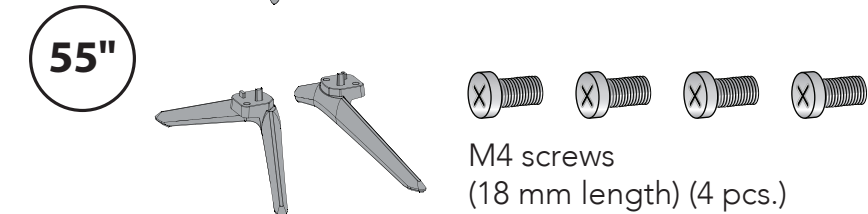

Remote and two AAA batteries

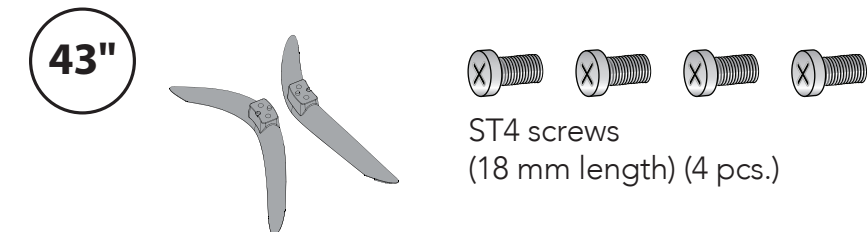

## WHAT YOU NEED (not included)

- Phillips screwdriver
- Computer, tablet, or smart phone (to connect with a Roku account)
- Roku account and Internet connection (for streaming)

\*Subscription or other payment may be required to access certain content.  
**IMPORTANT:** Roku never charges for activation. A Roku account and internet connection are required for activation. A paid subscription or other payments may be required for some streaming app content. App availability subject to change and varies by country.

## FIND YOUR USER GUIDE ONLINE!

Go to <http://www.usca.pioneer-tv.com> and search for  
PN43-R851-26U / PN43-R851-26C / PN55-R851-26U /  
PN55-R851-26C / PN65-R851-26U.

For Roku OS features, the manual can be found at  
[go.roku.com/tvmanual](http://go.roku.com/tvmanual)

 
**!** Before using your new TV, read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.

## 1 START HERE

### How do I attach the stands to my TV? (not for wall mounting)

Carefully place your TV face-down on a cushioned, clean surface. Use a Phillips screwdriver to secure each TV stand to the bottom of your TV with two of the provided screws.

## USING THE STANDS

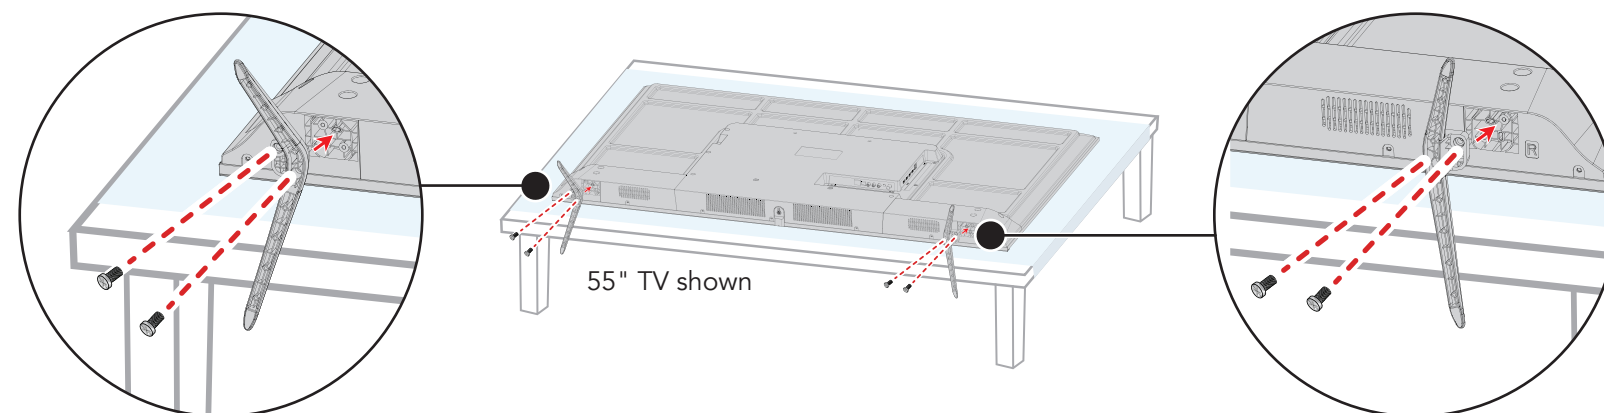

**43"** ST4 screws (18 mm length) (4 pcs.)

**55"** M4 screws (18 mm length) (4 pcs.)

**65"** M4 screws (25 mm length) (4 pcs.)


## WALL MOUNTING

 Before you mount your TV, make sure that:

- You remove the stands if you have already installed them.
  - The wall-mount bracket supports the weight of your TV.
- See the instructions that came with your wall mount for more information about how to correctly mount your TV.

**WARNING:** Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.

**Note:** Wall-mount screws are not included.

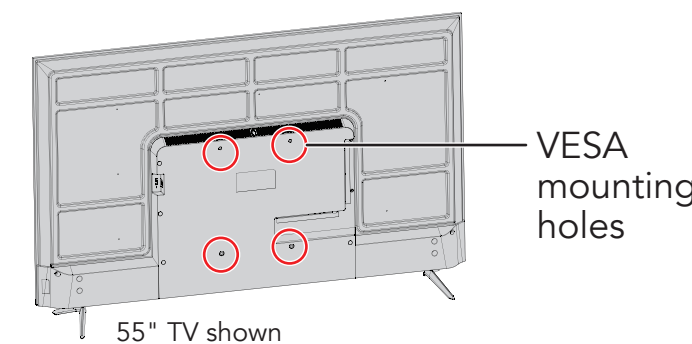

**43"** **VESA Mounting Pattern**  
200 × 300 mm  
Screws: Type M6,  
10 mm (4 pcs) length depending  
on the wall mount

**65"** **VESA Mounting Pattern**  
300 × 300 mm  
Screws: Type M6,  
20 mm (4 pcs) length depending  
on the wall mount

## 2 MAKING CONNECTIONS

How do I watch TV (cable, satellite, or antenna) or connect a device such as a DVD or Blu-ray disc player or game console? How do I connect to the internet?

### VIDEO OPTIONS

 
#### HDMI (BEST)

**Note:** You can use HDMI to connect to other HDMI devices. To use eARC/ARC functionality the connected device must also have HDMI eARC/ARC. Both devices need to be plugged into **eARC/ARC** HDMI ports.





#### ANT/CABLE IN (GOOD)









**Note:** Connect an HD antenna or clear cable (via a wall jack).

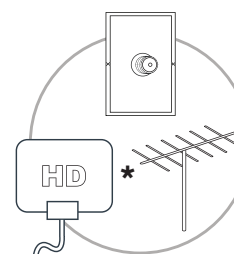

#### AV (GOOD)

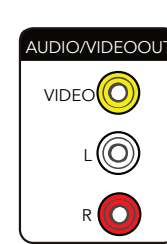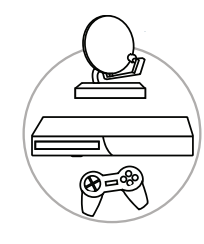  


#### HDMI options

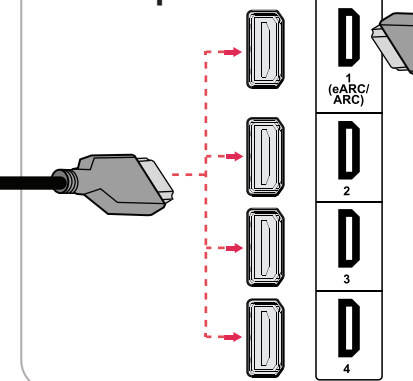        


## FEATURES
 
### Front


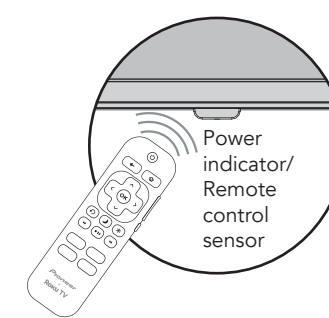


### Bottom

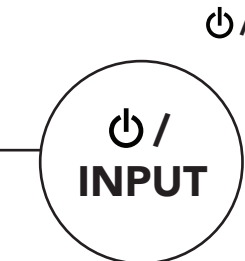 

**○ / INPUT button**  
Press to turn on your TV. When your TV is on, press to cycle through the power and input selections.

### Back


 
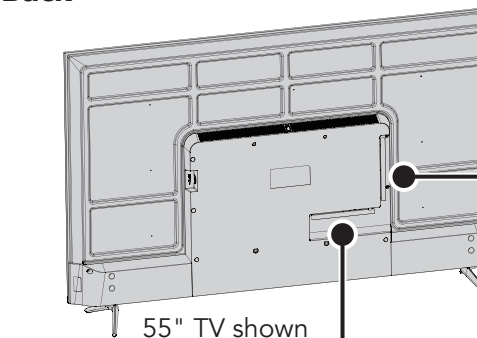 


**Note:** Images do not necessarily represent the exact design of your television.

### AUDIO OPTIONS USING HEADPHONES


   
### USING DIGITAL AUDIO

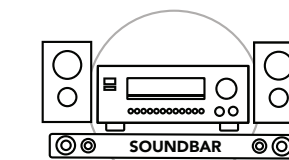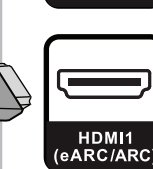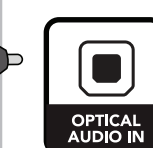

For best audio clarity use **HDMI 1 (eARC/ARC)** for audio output. Surround sound signal from the TV/source can be compressed when using non-HDMI connections.  
**Note:** If you need to change the digital audio format, go to **Home**, select **Settings**, and then select **Audio**. Next, select **Audio Output**, then select **Digital Audio Format**, and change the setting to **PCM** or your preferred audio format.

### ETHERNET (optional)



 
**Note:** You can use a wired Ethernet connection to access the internet instead of a Wi-Fi connection. Plug an Ethernet cable into the **ETHERNET** jack on your TV and your Ethernet connection.

### 3 TURNING ON MY TV


#### When can I turn on my TV?

##### WHEN YOUR TV IS IN PLACE:


- 1 Plug one end of the power cord into **AC IN** of your TV.

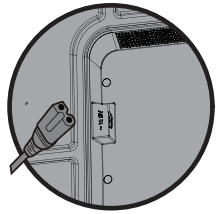

- 2 Plug into a power outlet.

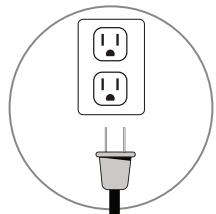 

 - 3 Remove the remote cover and install the batteries.

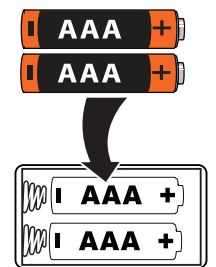


**Tip:** Always replace dead batteries with two brand-new AAA batteries from the same manufacturer. Never use damaged batteries. If your remote gets hot during use, stop using and contact customer support immediately.

### 4 COMPLETE GUIDED SETUP
 
#### How do I activate my Pioneer Roku TV?

- 1 Press on your remote.
- 2 Follow the on-screen instructions on your Pioneer Roku TV by using your computer or smartphone to link to a Roku account. If you are not ready to connect to the internet now, you can still use your TV to view content accessible through other connected input sources.

**Note:** When powering on the TV for the very first time, the Guided Setup screens will guide you through the Wi-Fi setup steps.

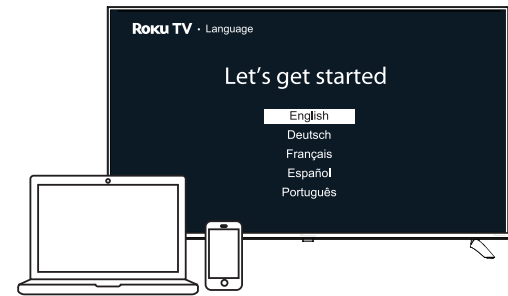

**Note:** Wi-Fi set up screens may change.

## FREQUENTLY ASKED QUESTIONS

 
#### Why do I need an internet connection?

You will need an internet connection to stream your favorite apps and for automatic software updates.

#### Why should I enter a payment method?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization. Roku never charges for activation.

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. We recommend referring servicing to a qualified service technician.

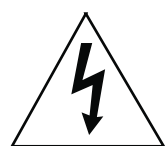

This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.




This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your TV.

#### SERVICING

 Servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, we recommend you do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.

## USING YOUR REMOTE

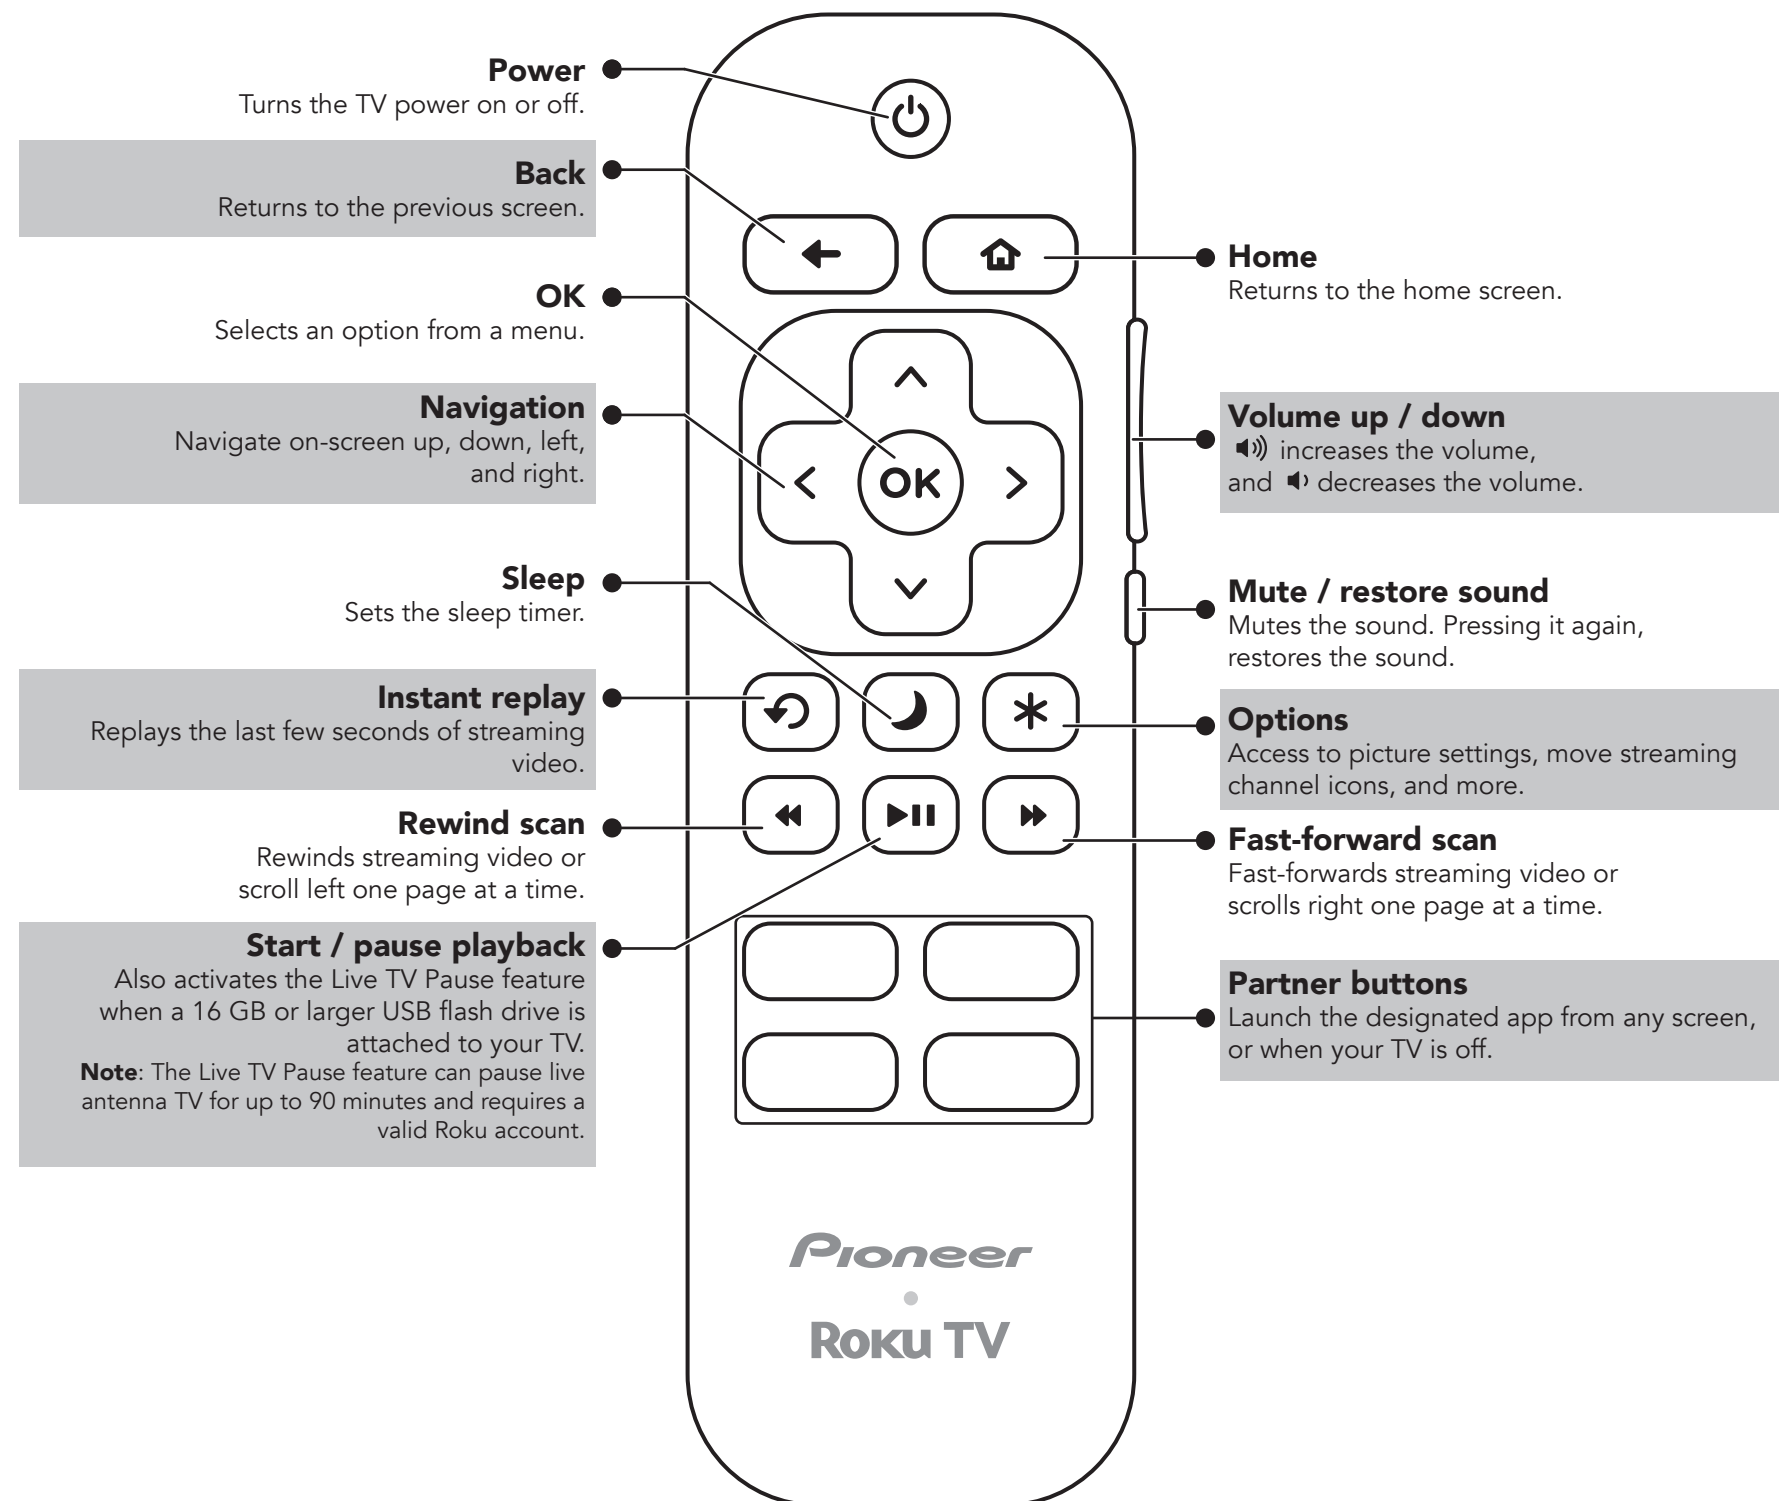

#### Access the Pioneer TV User Guide

Access the online *User Guide*. Go to [www.usca.pioneer-tv.com](http://www.usca.pioneer-tv.com) and search for your model number. Many questions regarding parts, service, and warranties can be answered by visiting the Support section of our website: [www.usca.pioneer-tv.com](http://www.usca.pioneer-tv.com).

#### Access the Roku TV User Guide

Visit [go.roku.com/tvmanual](http://go.roku.com/tvmanual) for details.

#### Contact Pioneer TV Customer Support Center:

1-888-287-7658 (U.S. or Canada)

#### One-Year Limited Warranty

Visit [www.bestbuy.com](http://www.bestbuy.com) for details.

#### Need Additional help?

Check out our Support Community at [www.bestbuy.com](http://www.bestbuy.com) for helpful information from other Insignia TV owners.

#### We're Here For You

[www.bestbuy.com](http://www.bestbuy.com)

For customer service, call: 1-877-467-4289 (U.S./Canada)



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress, and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2019 Dolby Laboratories. All rights reserved.

PIONEER and the Pioneer logo are registered trademarks of Pioneer Corporation, and are used under license.

Not all apps and content available in LED TV (UHD).

Roku, Roku TV, the Roku logo, and the purple d-pad design are the trademarks or registered trademarks of Roku, Inc. in the United States and other countries. All other trademarks and logos herein are the property of their respective owners.

Distributed and warranted by Best Buy Purchasing LLC  
7601 Penn Avenue South, Richfield, MN 55423 USA  
©2025 Best Buy. All rights reserved.